Subject: Commissioning Process for EESOLAR-10KTL-LC0

Revision History
Version 1.0 – October 2026- Initial release

Applicable products and models
EESOLAR-10KTL-LC0 Inverter


For setting up and monitoring Entelar Energy hardware, you will need to use two different apps:

- **HiSolar** – used to set up (commission) the devices
- **Univers** – used to monitor the system

**Commissioning the devices-HiSolar App**

1. Download the HiSolar APP for commissioning.
   Android https://play.google.com/store/apps/details?id=com.solar.pv
   IOS https://apps.apple.com/us/app/hisolar/id6447599228

2. Stand next to the inverter and open the **HiSolar** app. Tap **Scan**, then select **WLAN Connection**. Scan the QR code on the inverter to automatically connect to the inverter's Wi-Fi hotspot. The inverter Wi-Fi password will be populated automatically.

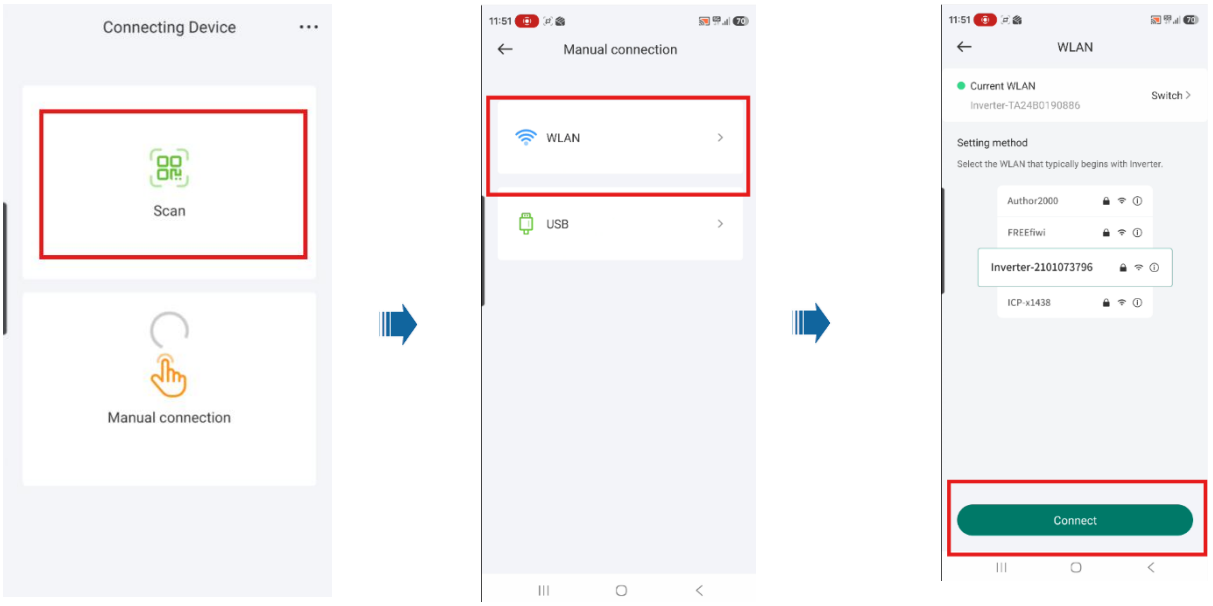



If manual connection is required, select the inverter's Wi-Fi network from your device's available Wi-Fi networks and enter the password printed on the label on the right-hand side of the inverter.




## 3 Set the installer password

Create a password for this inverter. You will need it whenever you connect through **HiSolar**, so **record it securely**.

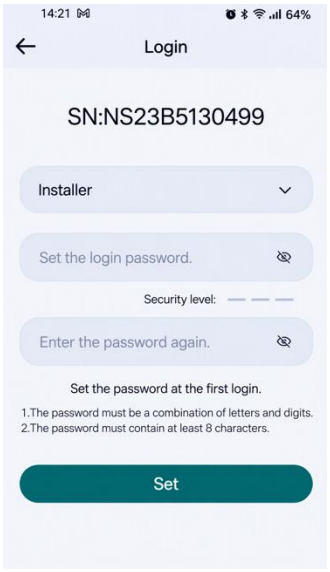



## 4 Complete Basic parameters


- Open **Quick Settings.**
- Set Grid code to **AUSTRALIA-AS4777_A-LV230** unless your local lines company specifies otherwise.
- Enable Sync Phone Time.
- Set the time zone to **Auckland**, then tap **Next**.

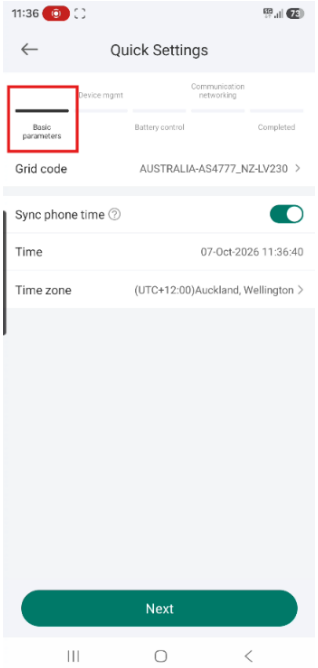


## 5 Verify Device Management


- Confirm every connected device has a green status indicator.
- If a device is not green, check its wiring and communications connection.
- For a standard single-phase meter, select **DDSU666-H (Single-phase)**.
- For cascaded inverters, tap Search. If no optimizers are installed, skip the optimizer search.
- When all devices are detected and verified, tap **Next**.

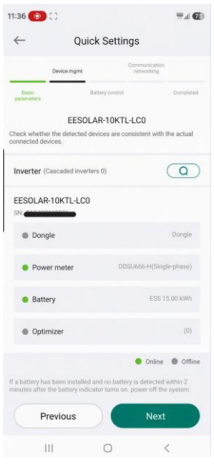

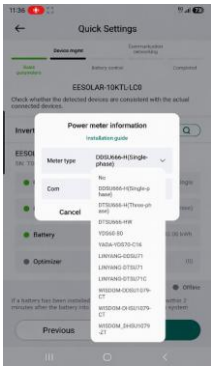



## 6 Battery Control

- On the working mode settings select **Maximum self-consumption**
- This can be changed later in Univers if the system owner has different requirements ie TOU

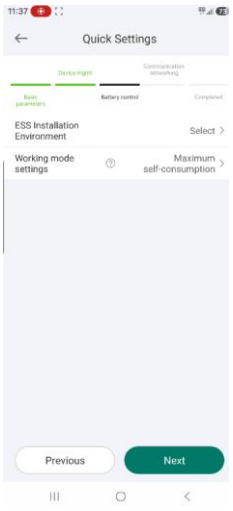



- Select the applicable installation environment
- If Outdoor or Garage does not apply, select None of the above. You will then need to review the prohibited installation areas

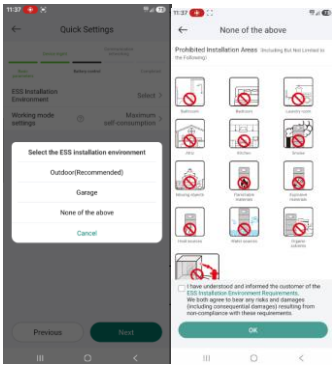


## 6 Communication Networking

- Under **Network Connection**, select the site's local Wi-Fi network and enter the **Wi-Fi password** to connect.
- Tick **"I have been authorized by the user to connect to the management system."**
- Enter the following management system settings:
  - Domain name: **entelarenergy-emsportal.com** Alternatively, enter the IP address **20.199.96.147**
  - **Port number: 27250**
  - **TLS encryption: Enabled**


- If using a 4G Dongle use port number 27251 and ensure TLS Encryption is disabled
- Check that the Wi-Fi connection shows **Connected** and that all settings are correct
- Tap **Next** to continue.

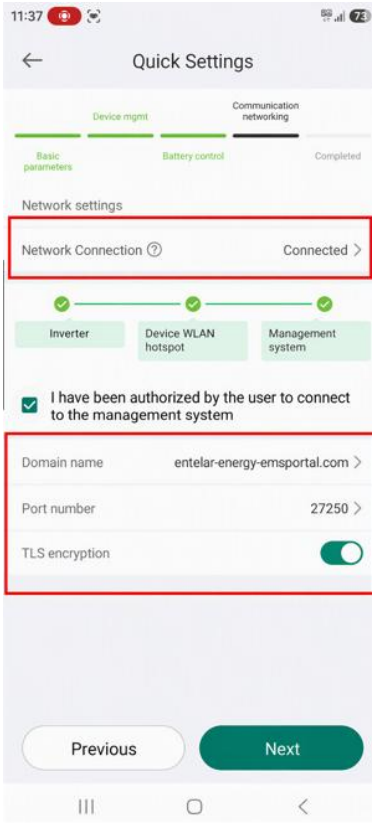



Once Quick Settings is completed, you should see the energy flow diagram and all devices online.

Check the inverter indicators:

- DC (LED1) and AC (LED2) should be solid green or blinking slowly for more than 3 minutes
- The Communication indicator (LED3) should be blinking green

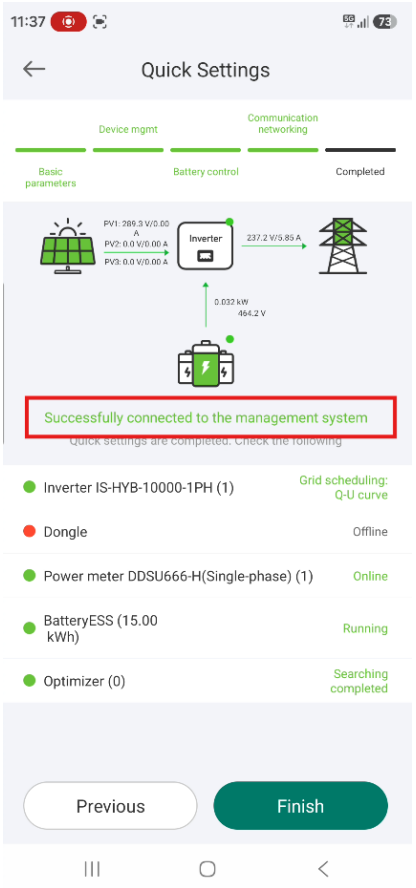

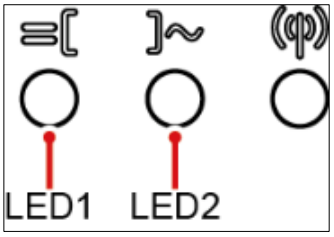


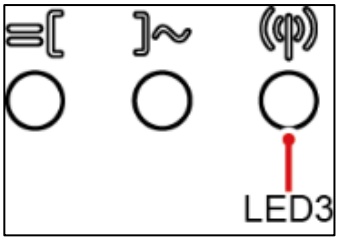

*Hint: Take a screenshot of the **Completed** page. This can help the Entelar support team diagnose any issues if the process doesn't go smoothly.

Now that you've completed all the commissioning settings for the inverter, you can create a plant in Univers so both you and the system owner can access it remotely.

**Monitoring Platform – Univers EMS (Entelar):**

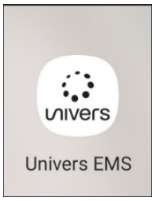
1. Download Univers app for parameter setting & monitoring.





Android:
https://play.google.com/store/apps/details?id=com.enos.mobile.newenergy.hossain&pli=1
IOS:
https://apps.apple.com/us/app/univers-ems/id6450944236

2. Set up your account by clicking 'Self-Registration'.

- For installer admin the Entelar Energy Company Invitation Code is '**EESOLAR2026**'
- For installer, please reach out to your installer admin for your company's invitation code.

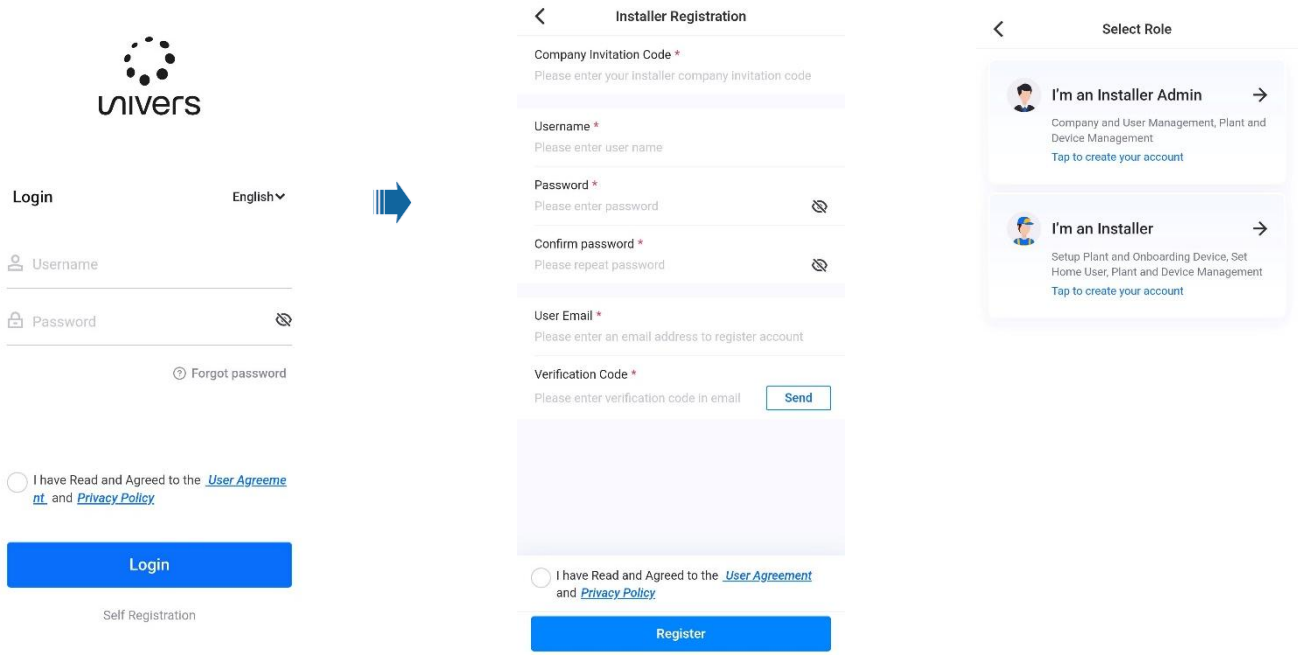



You will receive a verification code, example of this below:

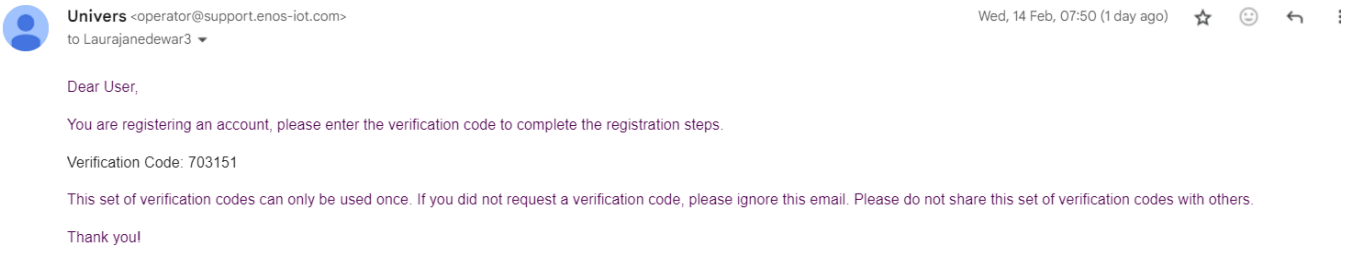



If you do not receive the Email verification code, kindly check your spam / junk folder.

Any difficulties with the registration process please do not hesitate to reach out to:
entelarenergyhelpdesk@entelargroup.co.nz
Or call
0800 835 3447

3. After completing the commissioning steps in HiSolar, log in to Univers to add the plant. Tap **Plant Guide**, then scan the QR code on the right-hand side of the inverter or type in the inverter serial number manually. Select **Add to New Plant**. All devices shown in HiSolar should appear and be connected. Then tap **Next**.

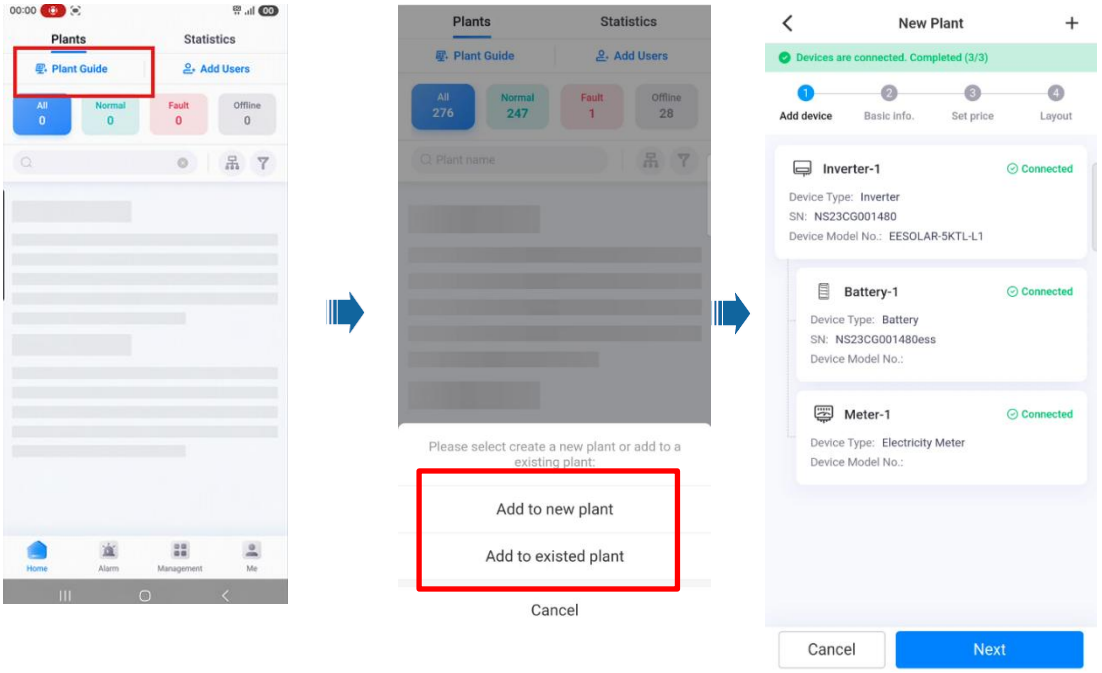



4. In **Basic Info**, enter the plant details. Make sure **DST** (Daylight Saving Time) is enabled and set the plant time zone to **Pacific/Auckland** so daylight saving changes won't affect the system. After entering all the information, tap Next.

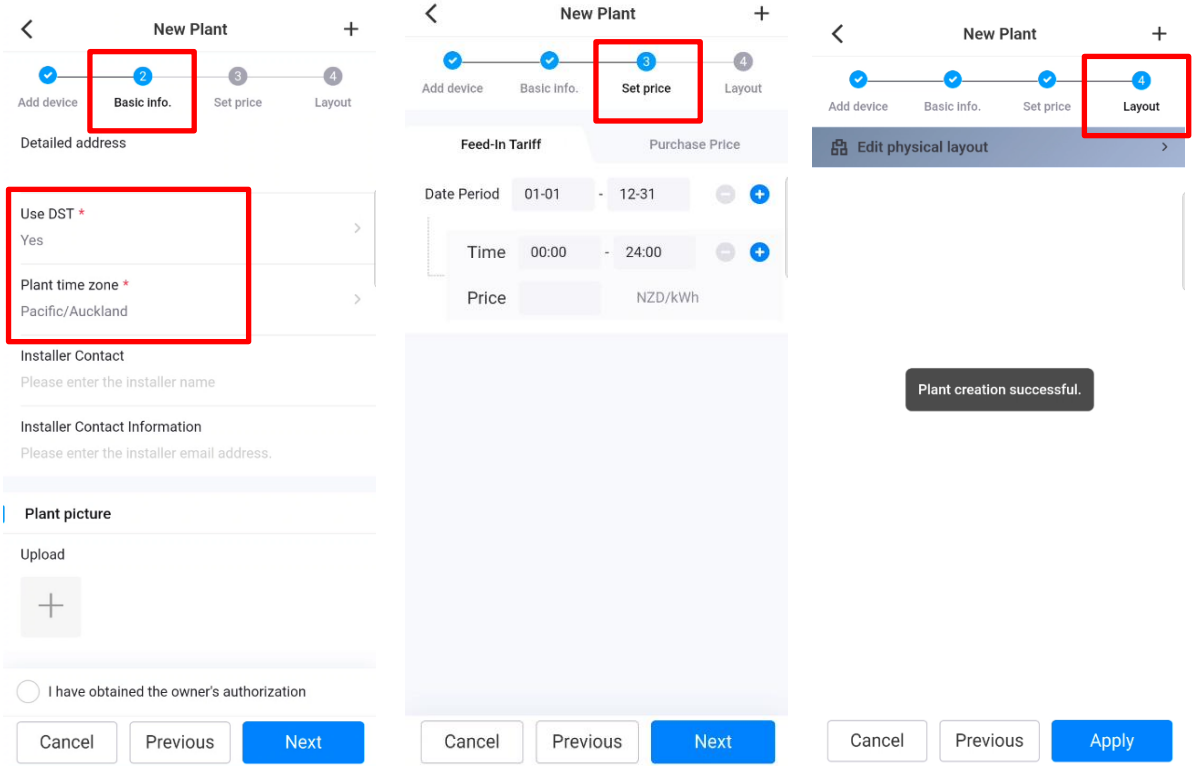


5. In Set Price, enter the **Purchase Price** and **Feed-in Tariff** from the power company to calculate the plant's revenue. You or the system owner can update this later. Then tap **Next**.
6.

7. You can skip the layout step by tapping Apply. A confirmation message will show that the plant has been created successfully. The app will take about 5 minutes to sync all data. Then, you can monitor the plant remotely.
8. To add users, tap **Add Users**. Select the Role as User (plant owner) and choose the related plant, then tap **Complete**. The user will receive an email to set up their password.

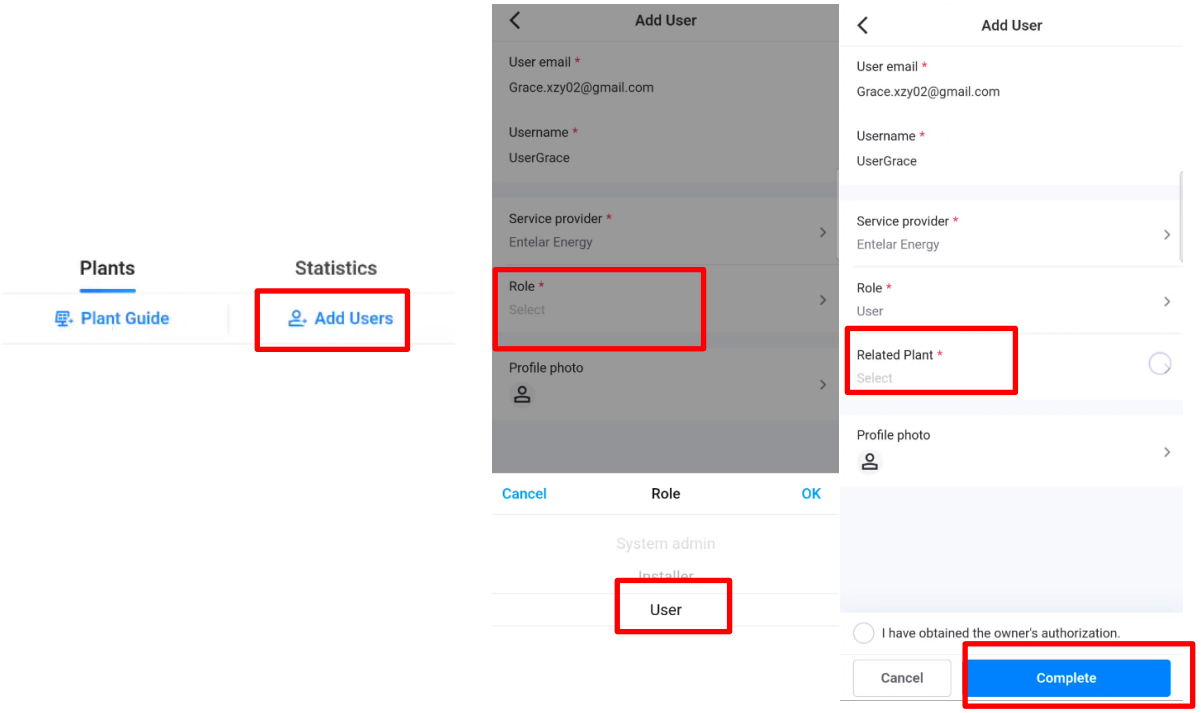


9. You have now completed the basic setup in Univers.

Entelar Energy
Level 3, 46 Sale Street
PO Box 90314
Auckland 1010, New Zealand